

Instruction Sheet

Dual Wheel Installation with Internal TPMS Sensors

Always consult with your Certified Safety Administrator prior to any installation procedures.
Read and understand all instructions and procedures before service to components begins.

Recommended installation for Internal Sensor TPMS-equipped Dual Wheel Vehicles

Please review the following instructions to ensure proper orientation of internal TPMS Sensors using the 180° valve stem orientation method (See Figure 1):

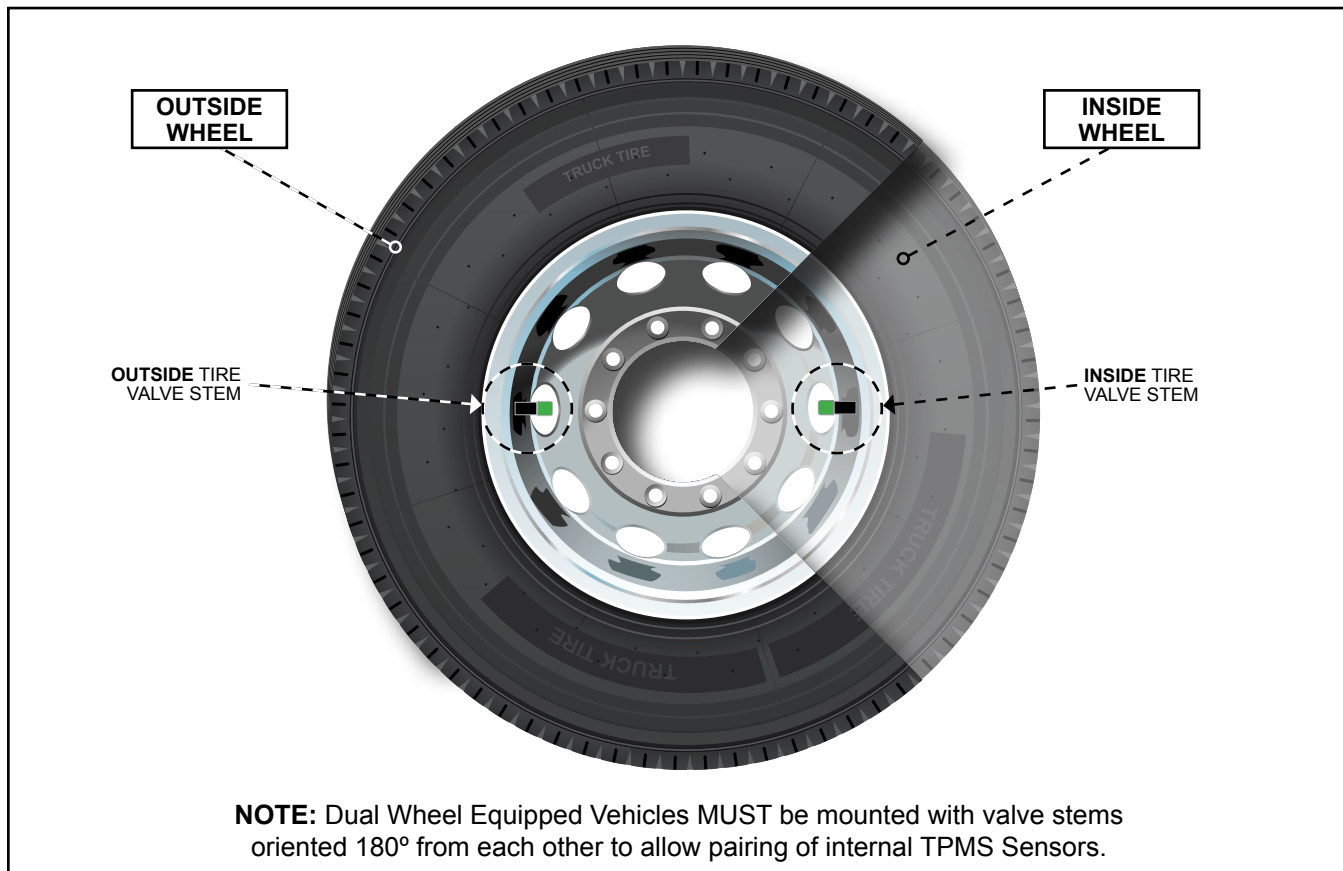


Figure 1: 180° Valve Stem Orientation.